



Set Up Your Headset



The headset contains headphones for you to listen to the language lessons and a microphone for you to record your voice.

WARNING: The headset may initially be very LOUD. Adjust the Playback or Output volume settings to Low before using your headset for the first time.

A Connect your headset

- 1** Plug your headset into a USB port directly on the computer, not into a USB hub or other external device. If you have volume controls on the cord of the headset: Look for the green light. If the green light is on, the headset is connected to a working port. If the green light is off, the port is not usable. Try a different USB port.
On the volume controls, set the Mute switch to **Off** and set the volume to **Low** (see WARNING above). The volume can be adjusted later, if needed.
On Windows XP: Look for the **Found New Hardware** balloon in the system tray which indicates that the computer detects the headset.
If the computer does not recognize the headset as connected, unplug the device and then plug it in to a different port. If that does not fix it, then shut down and restart the computer while the headset is connected.
- 2** Select the USB Headset as the default device and check volume levels.

B Set default device and volume levels

Windows XP or Windows 2000:

- 1 Open the **Control Panel** from **Start Menu > Control Panel** or **Start Menu > Settings > Control Panel**.

Windows 2000: Go to **Sounds and Multimedia**.

Windows XP Classic View: Go to **Sounds and Audio Devices Properties**.

Windows XP Category View: Go to **Sounds, Speech, and Audio Devices** then **Adjust the System Volume**.

- 2 In the **Sounds and Audio Device Properties** (XP) or **Sounds and Multimedia Properties** (2000) window, go to the **Audio** tab.

Under **Sound Recording**, adjust the sound input settings you record into the microphone:



Set the computer to use the USB Headset Microphone.

Windows 2000: Select **USB Audio Device** as the Preferred Device.

Windows XP Select **USB Headphone Set** or **USB Audio Device** as the Default Device.

Click the Volume button to open the Recording Control window. In the Recording Control window:

Make sure the **Select** checkbox under Microphone is checked.

Make sure the Volume slide bar is at least halfway up (adjust as needed).

Under **Sound Playback**, adjust the sound output settings you hear through the headphones:



Set the computer to use the USB Headset Microphone.

Windows 2000: Select **USB Audio Device** as the Preferred Device.

Windows XP Select **USB Headphone Set** or **USB Audio Device** as the Default Device.

Click the Volume button to open the Speaker window.

Under the **Speaker** column, make sure the **Mute All** checkbox is not selected.

Use the **Volume** slide bar under the **Speaker** column to set the volume output to Low (see WARNING above). The volume can be adjusted later, if needed.

Select the checkbox **Use only default devices** or **Use only preferred devices** at the bottom of the window.

- 3 Click **OK** to save changes.

Windows Vista:

- 1 Select **Control Panel**.
Classic View: double-click **Sounds**.
Control Panel Home View: click **Hardware and Sound** and then click **Sound**.
- 2 To adjust the sound input you record into the microphone:
In the Sound window, go to the **Recording** tab.



Look for the device listed as **Microphone: USB Audio Device**.

If it is working correctly, the icon displays with a green checkmark, and the device name includes a status of **Working** with a vertical bar on the right-hand side which shows green bars as you speak into the microphone.

If it is not working correctly, click once to select the device and then click the **Configure** button. This will open Speech Recognition Options, where you can go to **Set up microphone** to configure the microphone.

If the device does not appear in the **Microphone: USB Audio Device** list, then right-click on any device and select the option **Show Disabled Devices**.

If the device does appear in the list with a status of **Disabled**, then right-click on that device and select **Enable**.

If the device still does not appear in the list, unplug it and plug it back in (possibly using a different port).

- 3 To adjust the sound output you hear through the headphones:
In the **Sound** window, go to the **Playback** tab.



Look for the device listed as **Speakers: USB Audio Device**.

If it is working correctly, the icon should display with a green checkmark, and the device name should include a status of **Working**.

If it is not working correctly, click once to select the device and then click the **Configure** button to open **Speaker Setup**.

If the device does not appear in the **Microphone: USB Audio Device** list, then right-click on any device and select the option **Show Disabled Devices**.

If the device does appear in the list with a status of **Disabled**, then right-click on that device and select **Enable**.

If the device still does not appear in the list, unplug it and plug it back in (possibly using a different port).

Click once on **Speakers: USB Audio Device** to select the device and then click the Properties button.

(continued on next panel)

In the **Speaker Properties** window, go to the **Levels** tab and use the slide bar to set the volume output to **Low** (see **WARNING** above). The volume can be adjusted later, if needed.



Click **OK** to save the changes and close the **Speaker Properties** window.

4 Click **OK** to save changes.

Mac OS X (10.3x or 10.4x)

1 Open the **Sound** options in **System Preferences**.
Macintosh HD > Applications > System Preferences > Sound.

2 Select the **Output** tab (near the top of the window) to adjust the sound you hear through the headphones:



Click to select the **USB Headphone Set** device.

Use the **Output volume** slide bar (near the bottom of the window) to set the volume levels to low or medium-low.

Make sure the **Mute** checkbox is not selected.

3 Select the **Input** tab to adjust the sound you record into the microphone:



Click to select the **USB Headphone Set** device.

Speak into the microphone and watch for activity on the **Input level** meter.

Use the **Input volume** slide bar to adjust the volume input levels as needed (generally, medium or medium-high is good).